



Recommended Tools

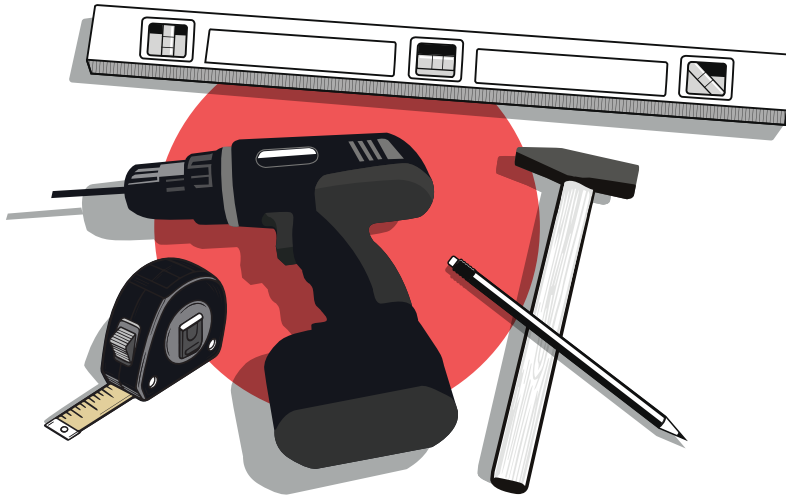

Hardware Supplied

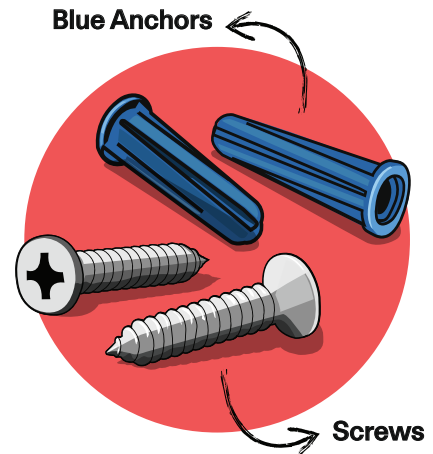

Gather your materials – wall anchors and screws (included with your art), hammer, pencil, level, and a drill with a **3/16" drill bit**

Drywall Surface Instructions as Follows


Step 1 Hold the canvas against the wall and place the level on top to ensure it's straight. Lightly mark a line with a pencil across the top of the canvas.



Step 1 Drill small holes where the anchors will go, then hammer the wall anchors flush with the wall
Drill screws into the anchors, leaving about 1 inch of the screws protruding




Drill holes, 3/16" diameter through drywall

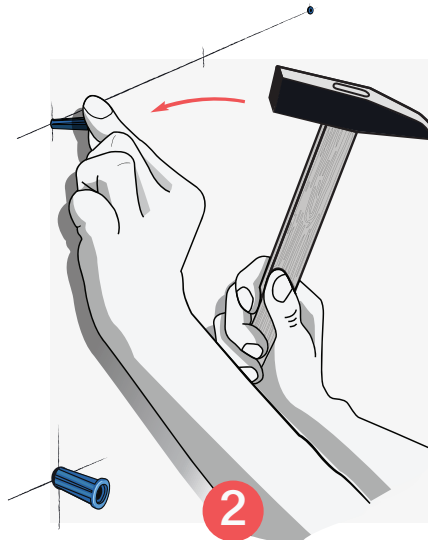


With the hammer, Tap the supplied drywall anchors firmly into drilled holes

Thin Bar Frames $\frac{3}{4}$ "
(12 x 8 size only)

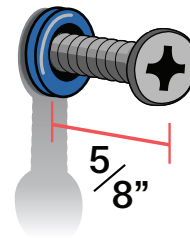


Thick Bar Frames 1"

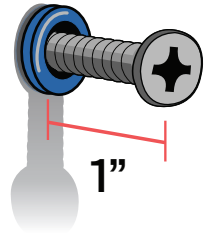

3

Carefully drive the drywall screws into the anchors, leaving the screw heading protruding from the wall surface as follows.

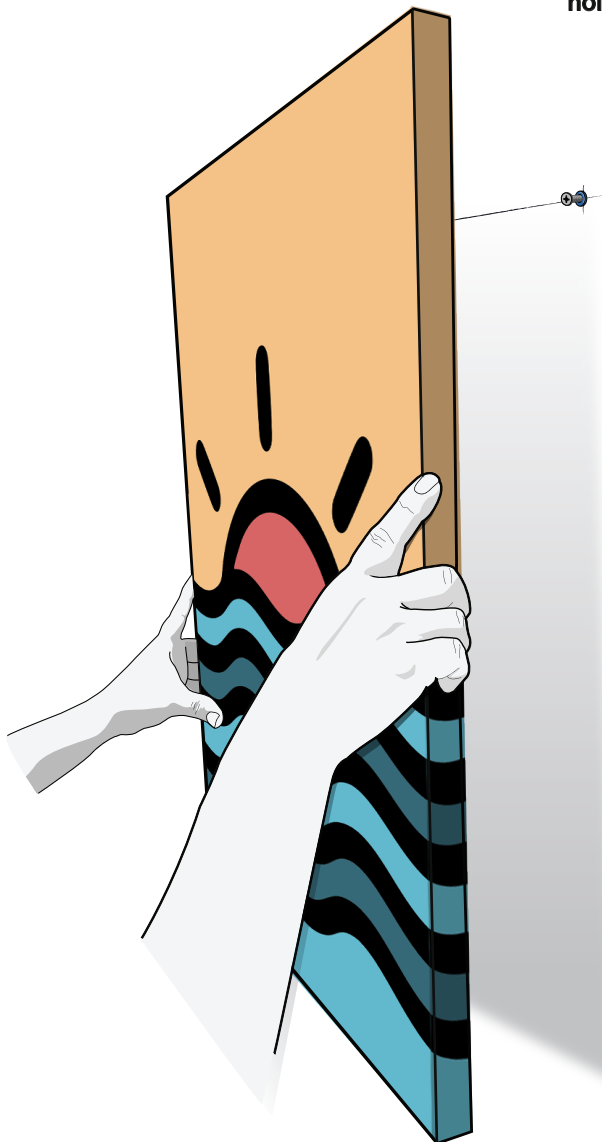

4

Gently hang your canvas on the screws, step back to confirm it's level

Enjoy your Art



Recommended Tools



Hammer




Towel





Ice Cube

Fixing Loose Canvas

In the corners of the canvas on the back, you will notice two wedges red stretcher keys in each corner that allow you to adjust the tension by slightly tapping on them

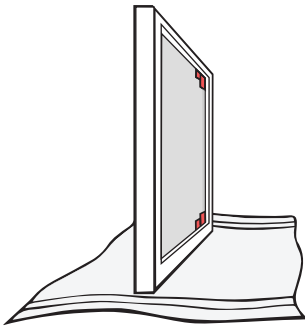


Stand piece of art upright on hard surface and place a piece of cloth between the art and the surface to protect both.

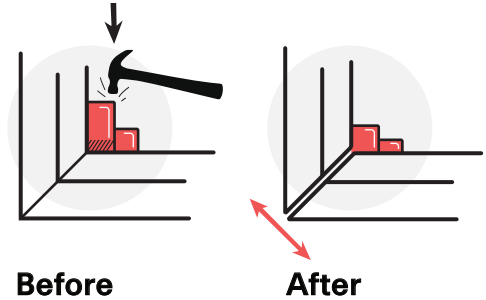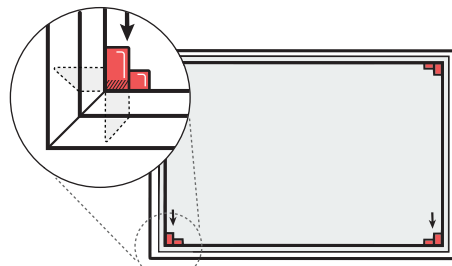


Tap down on the stretcher wedges with a hammer where the arrows point. Rotate canvas to always be tapping downward towards the hard surface. Tap until you see the frame begin to split further apart. Repeat process until canvas is pulled taut.

Fixing Indentations & Creases

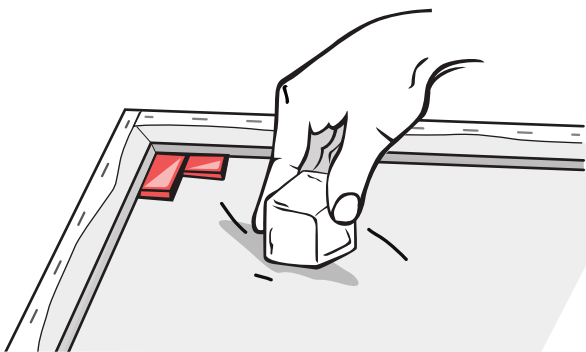


On the back of the canvas, rub the piece of ice directly to the crease for about 30-60 seconds.

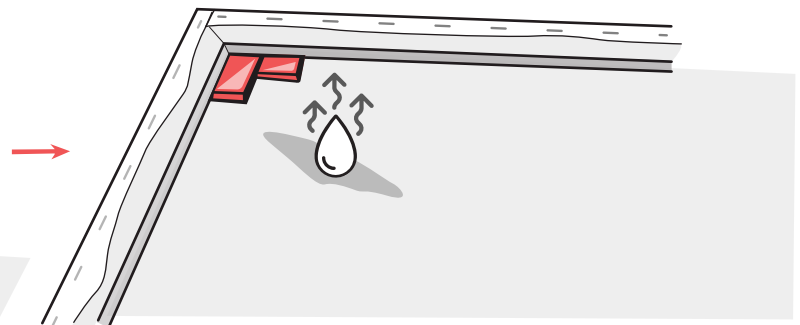


Let dry for 15-20 minutes and the crease or indentation should go away. Avoid over saturating, or canvas may need to dry for a while longer.

Fixing Warped Frame

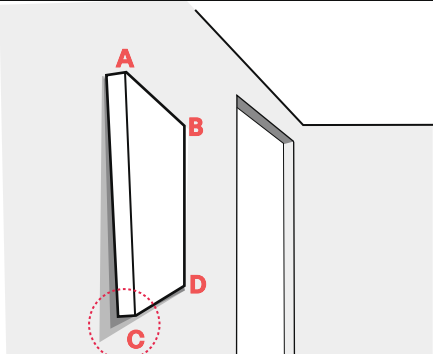

Warped frames can be easily fixed by bending them back.

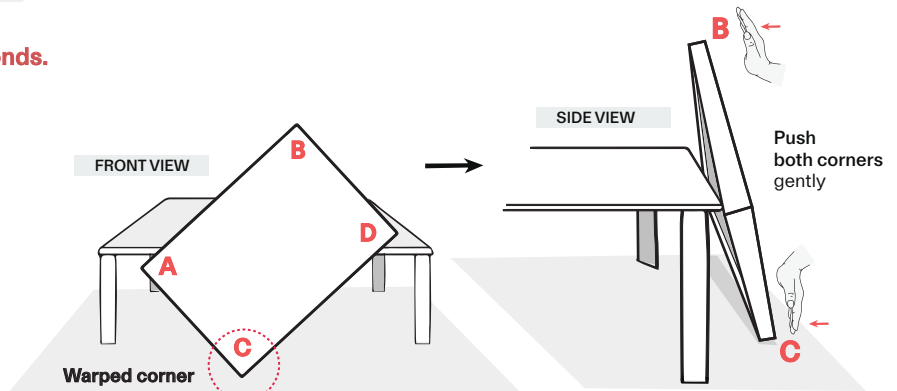

Place the art along a table's edge as shown. Place your hands on the corner that was coming away from the wall and its opposite corner. Gently push down on the corners to stretch the canvas diagonal. Hang your art piece on the wall and test. If still pulling away the from wall, repeat steps.

NOTE: It is normal to hear the wood slightly splintering.